





## 24 KEYS PIANO PLAY WAT FOR KIDS - PLAY22 Pringinal



You're about to unleash your child's inner musician! This beautiful **electronic keyboard playmat** boasts 24 touch-sensitive keys and 8 different musical instruments including piano, saxophone, violin, and more. With four different play modes - record, playback, demo, and play - and adjustable volume, this keyboard mat offers endless hours of musical fun and creativity. Made from super-strong vinyl, it's built to last and meets all US safety requirements

## INSTRUCTIONS TO USE

- No assembly required
- Unroll the keyboard mat on a flat surface.
- Install 4 AA batteries in the battery compartment located on the side of the mat.
- Turn on the power button located on the top left corner of the mat.
- Select your desired instrument by pressing the corresponding button.
- Adjust the volume by turning the volume knob located on the top right corner of the mat.
- Start playing the piano by tapping on the keys with your feet or hands.
- Use the record, playback, and demo buttons to create and listen to your own music.
- Recommended for children ages 3 and up and should be used under adult supervision.
- Do not place heavy objects on the mat or expose them to extreme temperatures.
- O Do not use the mat near water or other liquids.
- Always turn off the power when not in use to save battery life and prevent damage to the product.

The Play22 Customer Service Number 8888-279-2783

